
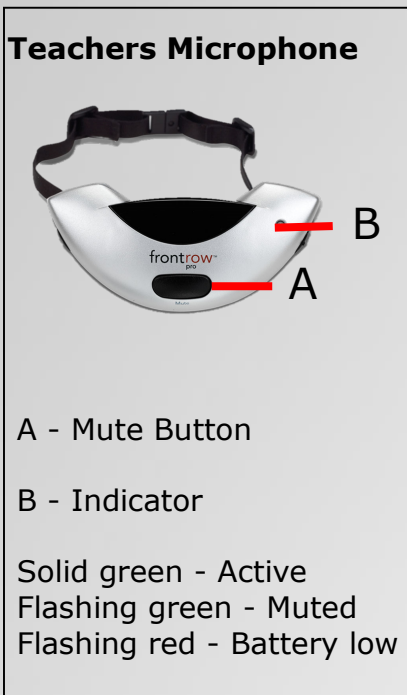


Supplied and Serviced by Roberts audio Solutions LTD

User guide - Pro Digital

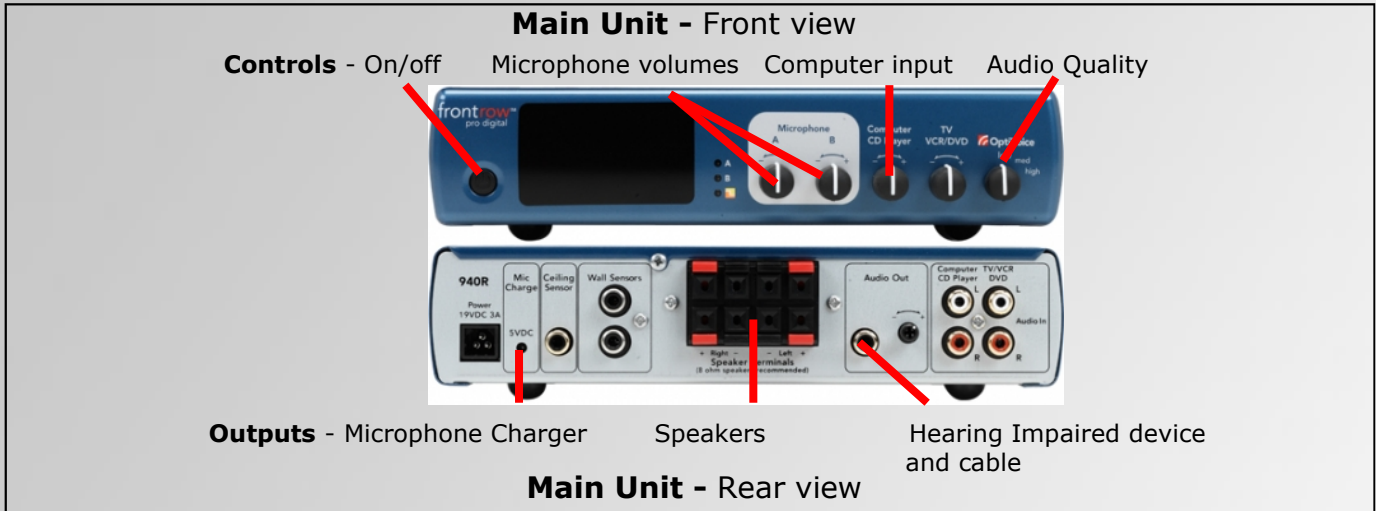

Instructions:

Setting up the device for use

- A solid red light will be indicated on the microphone when plugged into the main unit (B). This indicates that it is being charged
- To use the microphone, unplug the charging cable. The solid red light on the device will go off (B)
- Place the microphone comfortably around the neck using the provided strap
- To turn the microphone on switch the button (which is placed on the side) into the 'on' position. The light will then start to flash green (B). If the light on main unit remains yellow, press and hold the 'on/off' button on the main device until it turns green
- To un-mute the microphone push in the centre mute button (A) until the light goes to solid green
- Please ensure that you do not switch the 'A - B' switch which will adjust the input channels. It should be set to the corresponding channel on the main unit
- Indicator light will blink red on the microphone when the battery is low

Installing the microphone battery

- To replace the battery push down on tab to open battery compartment (the correct re-chargeable type is required with the recommendation that it should be changed once year. Please contact us for replacements)
- Insert battery into compartment (Note polarity indicators)
- Replace battery door
- Charge battery through unit overnight before initial use

Using the microphone

- Set the audio volume by speaking in a normal tone while walking the entire room. Have a second person adjust the volume to a comfortable level. Once audio volume is set the only thing you need to remember is to turn the microphone on in the morning and turn it off and charge it in the evening.